



Inspection ladder

- You can only open the ladder from the bottom with a ruko lock.

Universal Ladder

- You can open the ladder from bottom with a ruko lock AND you can open the ladder from the top with a release pin.

Fire Escape Ladder

- You can only open the ladder from top or each level with a release pin.

* The correct length of the ladder should be the measure length (blue line on drawing) deducted the distance length from the ground (0,4m)

Ruko lock



Ruko lock with wire



Releasepin

